

PANOPLUS

plywood underlayment

Installation Instructions

Allow PanoPlus Plywood Underlayment panels to acclimateto the room environment for 48 hours prior to installation.

Make certain that the sub-floor you are applying PanoPlusPlywood Underlayment to is properly fastened, completelydry, level, smooth and free of all construction debris.

Place panels with the nail pattern face up.

PanoPlus Plywood flooring must be installed perpendicularto the floor joist. Underlayment edges must offset sub-flooredges by at least 8". Stagger the underlayment panels so that four corners do not meet.(See Figure 1).

Lightly butt flooring underlayment together but do notforce the panels together. Leave a minimum 1/4" and a maximum 3/8" gap at walls.

Fasten panels with non-staining ring shank underlaymentsnails with 3/8" heads, or 1/4" double coated chisel point crown staples.

Fastener heads should be set slightly below theunderlayment surface and the tips can not extend belowthe sub-floor. Do NOT set fasteners in straight rows. (See Figure 2 for correct nailing pattern).

Start in one corner and fasten the entire edge every 2".Fasteners should be installed 3/8" from the edge of thepanel. (See Figure 2).

Return to the starting corner and fasten the perpendicularedge every 2".

Return to that starting corner and begin fastening the interior of the panel 4" on center in a diagonal motionworking your way out towards the opposite corner.After you have secured the interior of the panel. Fastenthe two remaining edges every 2".

Fill all edge joints, gaps and voids with a patchingcompound that is approved by the vinyl flooringmanufacturer. Allow patching compound to drycompletely before installing the finished floor.

Figure 1

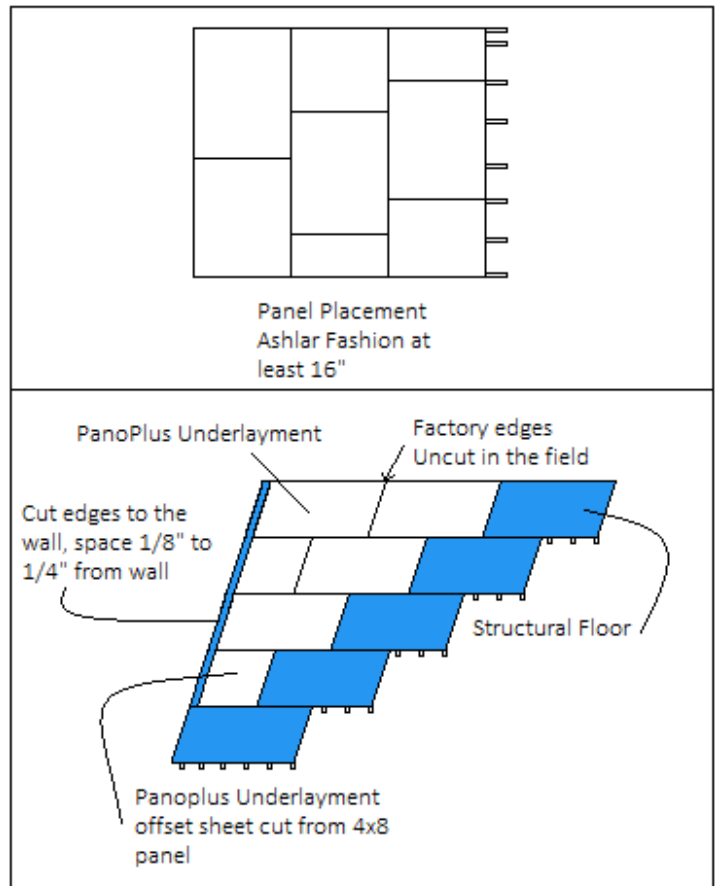


Figure 2

